TAD-90022 (8GB) -QUICK START GUIDE

尺寸： 210*297MM
材质128G铜版纸黑白印刷
红色虚线为折线

Introduction

Although this pro
the user manua
instructions, co

Turning On/(

To turn on the d
the boot-up scre
please wait befo
To turn off the d
"Power Off" and
Tip: *This device*
the ***Power*** *butto*

Power On and Off the Display
- Shortly press the [Power] button to turn off the display.
- Press the [Power] button again shortly turn the display on again.

Language Setting
- Tap on [Settings] and select [Language & Input]
- Tap on [Language] and select your desired language on the right side.

Getting Started

Backside

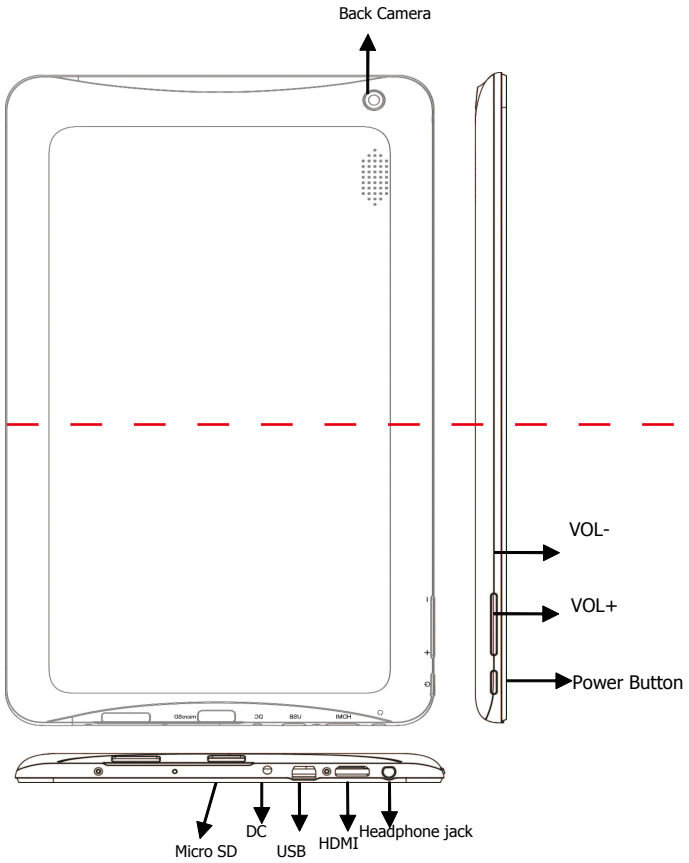

1. Power Button	Press and hold the power switch to turn on or off the device; Briefly press the switch to turn the screen on or off.
2. VOL + /-	Shortly press to increase / decrease the volume level.
3. Micro SD Card Slot	Accommodates any standard SD/SDHC memory card.
4. Camera (back)	Backside-Facing camera for taking avatar pictures and videos
5. DC	The port for charging
6. USB	Data transfer and OTG
7. Reset	Reset and restart the devise if it freezes or otherwise behaves abnormal.
8. Mini HDMI	
9. Headphone jack	Audio output connection for head-phones ***Note:*** *Speaker output is automatically disabled when headphones are connected to the player.*

Charging Battery

The device has a built-in rechargeable battery. No extra battery installation is required. Just charge the device when it indicates low battery.

To charge the battery, connect the device via the DC port. It takes about 4 hours to fully charge the battery.

Note:

a. We advice to use only the delivered power adapter with this tablet.

ed battery life, it is

e first time.
f you don't use the

nect the device (using the
peration.

Connect via USB

Please note: *Only use connecting cable with a maximum length of 80cm.Please make sure when connecting the USB adapter or connector cables attention to the correct alignment of the connector before inserting it into the USB socket on the unit. Incorrect insertion may cause damage to plug and socket.*

On the side of the plug there are usually small sizes of hooks that secure the fixation.

Pay special attention on the position of the hooks, they show upwards when connecting cables while the screen is above.

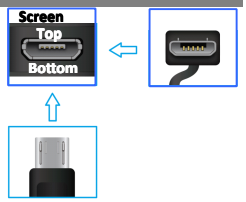

v1.0

Installing Memory Card

This device can read files directly from memory card and USB memory. To use a memory card, find the card slot at the side of the device and then insert the memory card into the slot in the correct orientation or Connect USB Memory using the provided USB adaptor cable. To access the files stored in the memory card, enter the **Explorer** mode by tapping the Explorer icon and select the "SD Card" directory.

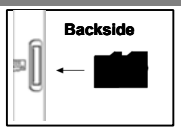

- Check that the Micro SD card is in the correct position with the contact pin facing downwards as illustrated. You may damage the card and the reader if Micro SD card is not inserted in correct position.
- Push the Micro SD card into the card slot until it clicks.
- To remove Micro SD card, push the card once again until it clicks.

Note: *We recommend using only Micro SD or SDHC cards up to 32GB capacity.*
- When a Micro SD card is inserted in or ejected from the device, it may take few seconds for the device to update the content.
- Please avoid inserting or ejecting Micro SD card when other operation is running as this may cause the system hang.
- Do Not remove the card if the content inside the card is being played. This will halt the operation of the device and might cause a system hang.
- Only use the provided USB adaptor cable to attach USB memory devices.
- Please use your fingernails to properly insert or remove the card.

Transferring Files

Before reading or playing files, you need to transfer media files from a computer to the device.
(1) Connect the device to a computer with the supplied USB cable and tap on "Turn on USB storage".
(2) Once connected, two removable disk drives will show on your computer. One represents the internal memory of the device, and the other represents the memory card inserted into the device. Now you can copy files from or to these disk drives just as you would on your hard drive.
(3) Choose "Turn off USB Storage" and then tap "Turn Off" to disconnect the device from computer.
(4) Disconnect the device from the PC safely.
a) Left-click the icon at the right bottom corner of the computer desktop.
b) Click the pop-up mini-window message of "Stop the USB Mass Storage Device – Drive (X)."
c) Disconnect the device from the computer.

Note: *The pre-installed applications and Android OS occupy a considerable part of capacity – nearly more than 1GB, it is normal that you see huge difference between available memory space and total capacity.*
Caution! The device supports Adobe DRM contents. Adobe Digital Editions (ADE) is required. Please refer to the user's manual for closer information's on how to use DRM protected files.

Screen lock

The screen automatically turns off and locks itself after a set period of time. When the screen turned off, press the **Power** button to light up the screen.

Push the lock icon and drag it to the open lock at the right side to unlock.

Wireless Network Setting

Tap 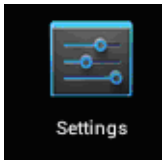

icon to enter the interface of wireless network connection.

Turn wifi on.

Press your wifi network and input pass word and then tap "connect" to enter wireless network.